



TONEBEAST OP-AMP INSTALLATION

WARNING! MAKE SURE UNIT IS UNPLUGGED AND POWERED DOWN DURING INSTALLATION!












TONEBEAST OP-AMP INSTALLATION, PG.2

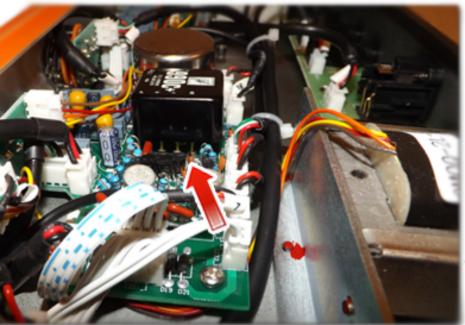

PLACE NEW JOHN HARDY OP-AMP IN THE EMPTY SLOT AND MAKE SURE PINS ARE LINED UP CORRECTLY

GENTLY PRESS INTO PLACE AND YOU'RE READY TO GO!