




WARNING!

WHEN INITIALLY CONNECTING THE LINK KIT:
CONNECT THE RCA CABLES TO THE LINK BOX FIRST.
THEN PLUG THEM INTO EACH WA 76. THEN FOLLOW THE
INSTRUCTIONS IN THIS DOCUMENT FOR CALIBRATION.



WA76 STEREO LINK INSTRUCTIONS

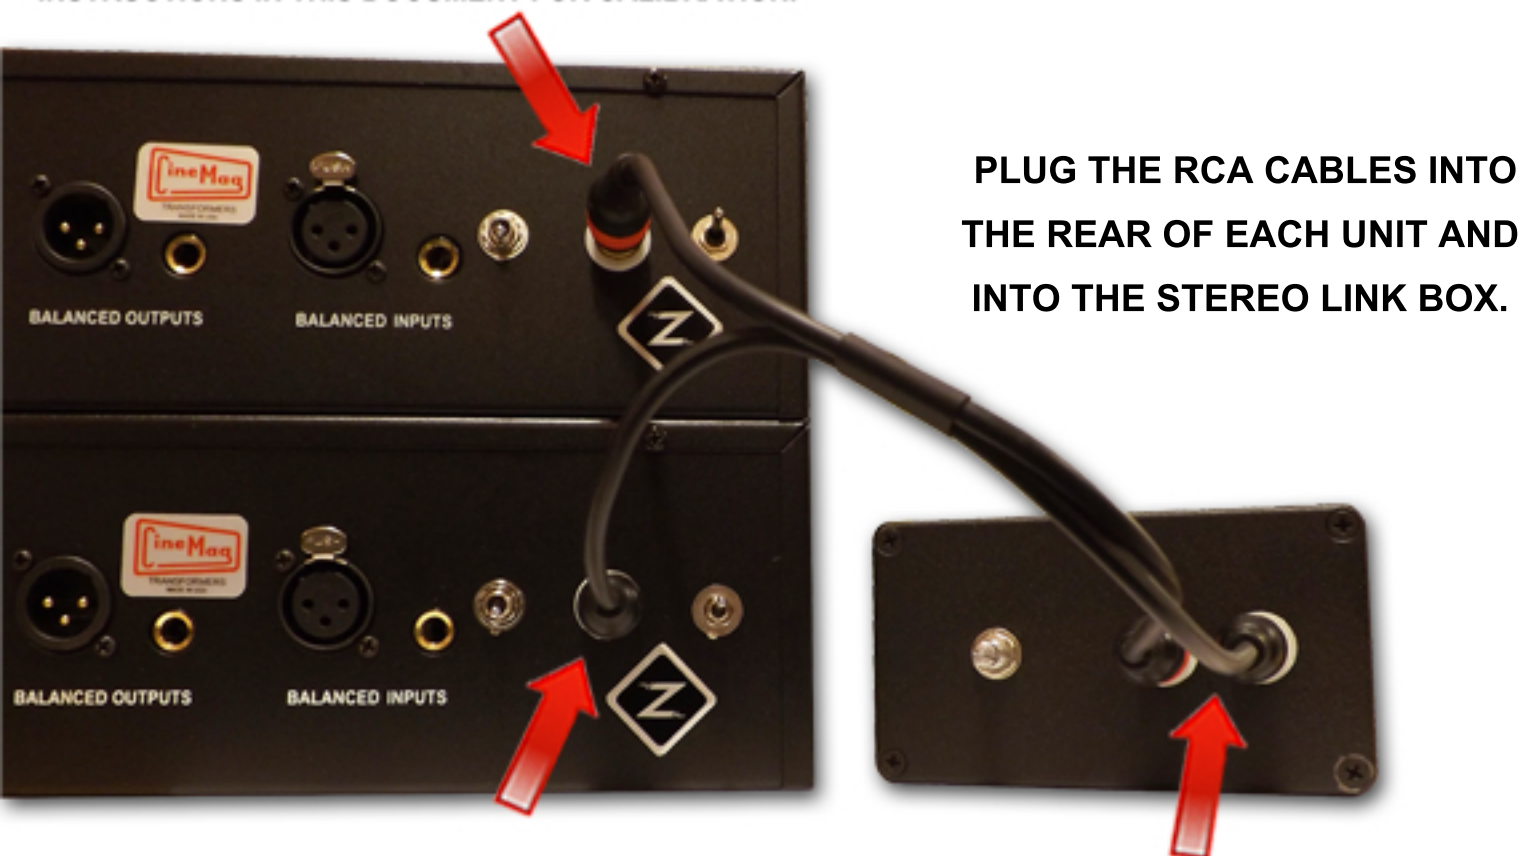



WA76 STEREO LINK INSTRUCTIONS PAGE 2



**TURN THE POT UNTIL BOTH UNIT'S
METERS REGISTER AS CLOSE TO
EACH OTHER AS POSSIBLE.**



**ONCE CALIBRATED, FLIP THE BYPASS
SWITCH BACK DOWN ON EACH UNIT
AND LEAVE THEM PLUGGED IN FOR
STEREO LINKED USE.**

NOTES:
YOU WILL WANT TO SET UP BOTH UNITS THE SAME EVEN WHEN STEREO LINKED (RATIO, ATTACK / RELEASE, AND GAIN STAGING), THIS IS THE SAME LINKING CAPABILITY OF ORIGINAL 1176 UNITS AS WELL AS MODERN REISSUES. THE LINKING ALLOWS THE FETS TO REFERENCE EACH OTHER'S VALUE AND HELP BALANCE OUT LEFT / RIGHT COMPRESSING OF A STEREO SIGNAL.

TO USE IN DUAL MONO DETACH THE CABLES FROM THE WA76 UNITS AS WELL AS THE STEREO LINK BOX.

THE AA BATTERY (INCLUDED) WILL LIKELY NEED TO BE REPLACED EVERY 12 MONTHS WITH AN ALKALINE STYLE. YOU WILL NEED TO REMOVE ALL 4 SCREWS ON THE STEREO LINK TO REPLACE IT.